

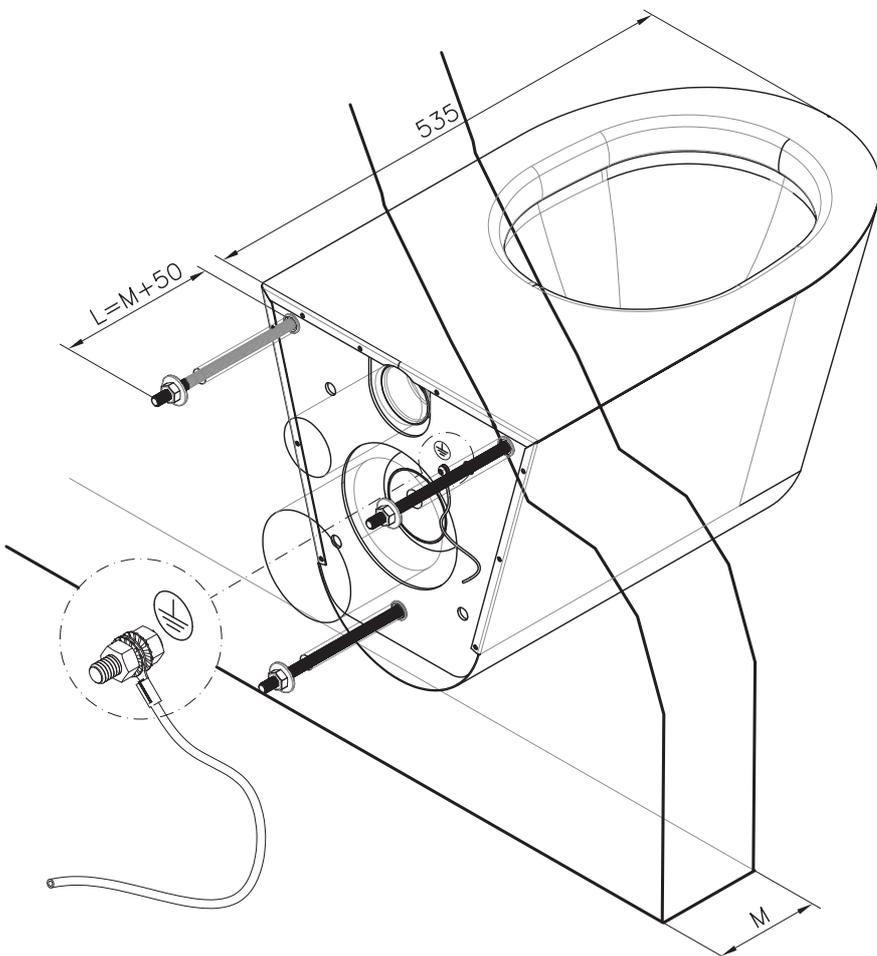
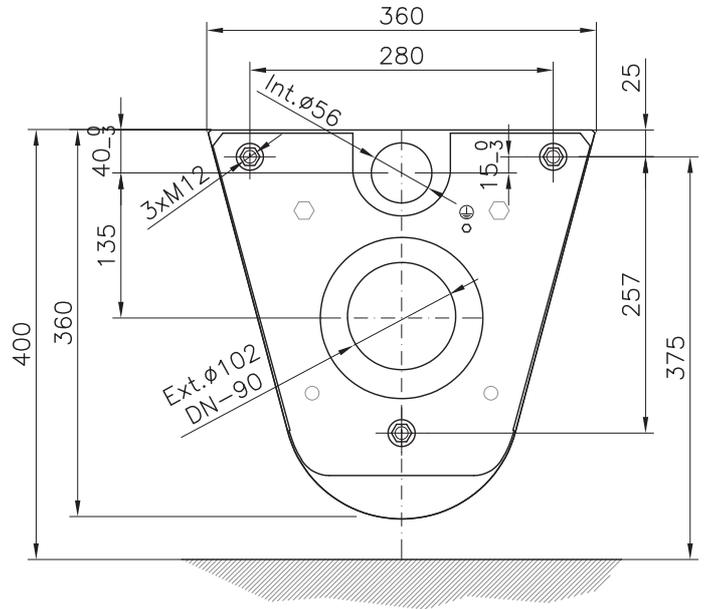


MONTAGE ANWEISUNG (DE)  
 MOUNTING INSTRUCTIONS  
 INSTRUCTIONS POUR  
 L'INSTALLATION (FR)

**ARMATRON**  
 MODERNE WASCHRAUM-HYGIENE

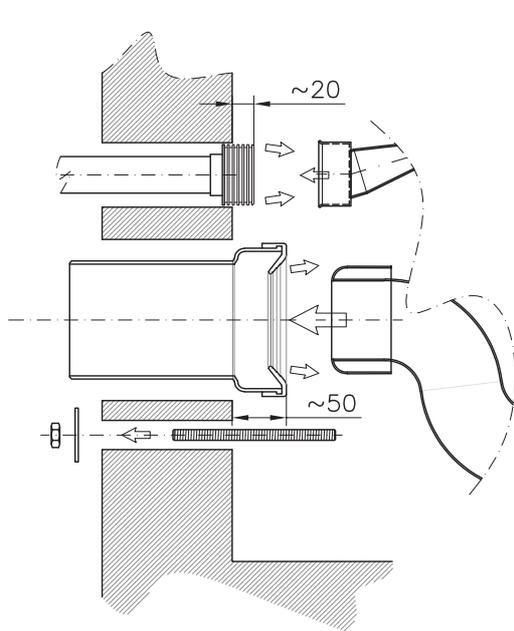

	535	1x	✓
	3xM12 L=200mm.	1x	✓
	Ø56	0x	✗
	Ø90-114	0x	✗

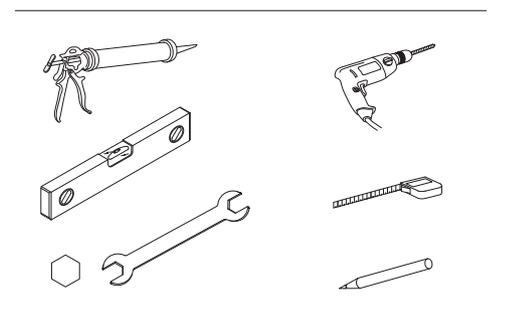

Mod. ASA-SLWN 04-XW